 


COSMO™ BAR 5720

BAR CABINET

INSTRUCTION MANUAL

LET'S GET STARTED.

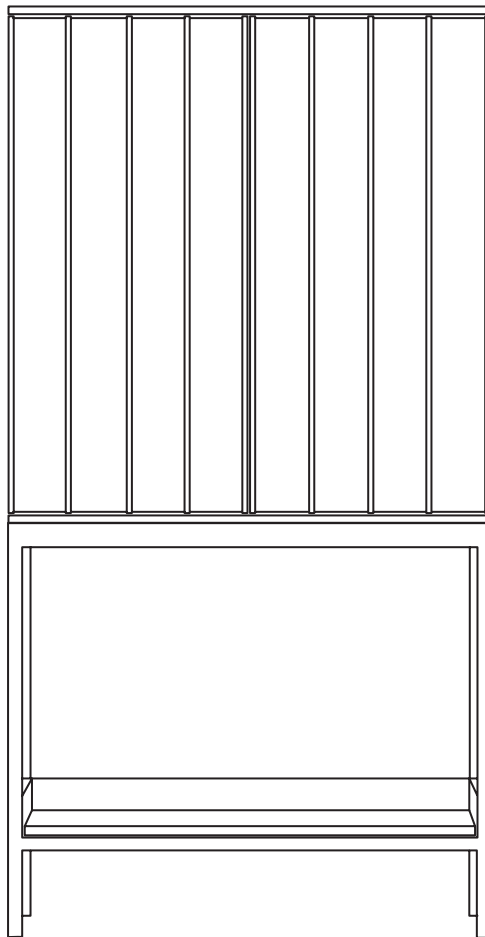

DESIGN MATTHEW WEATHERLY

BDi

BDIUSA.COM



Congratulations on the purchase of your Cosmo Bar 5720 from BDI. Your bar cabinet has been designed to provide a lifetime of enjoyment. This manual will provide you with assembly instructions and other helpful information that will ensure that you get the most out of your cabinet. Please save it for future reference.

Your Cosmo Bar has been engineered for simple assembly. It is designed for indoor use on level floors. Clean wood, metal, and porcelain surfaces with a damp cloth. Please follow these directions carefully to prevent any damage.

Should you need further assistance, contact BDI at customerservice@bdiusa.com.

 
 
ENJOY!

HARDWARE AND COMPONENTS

Unpack and identify the parts listed below. The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces, please contact BDI Customer Service at customerservice@bdiusa.com.

Do not use power tools for assembly of this product.


For all other concerns, please contact your BDI retailer.



PART #	T1
DESCRIPTION	Hex Driver / Hex Wrench
QUANTITY	1



PART #	T2
DESCRIPTION	Leveler Wrench
QUANTITY	1

 

PART #	H1
DESCRIPTION	M6 x 12mm Screw
QUANTITY	26




PART #	H3
DESCRIPTION	Wall Anchor Strap
QUANTITY	2



PART #	H4
DESCRIPTION	Rechargeable Strip Light
QUANTITY	1



PART #	H5
DESCRIPTION	Micro HDMI/USB Charge Cord
QUANTITY	26

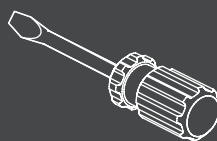 


TOOL REQUIRED (NOT INCLUDED)
Slotted Screwdriver




HARDWARE (NOT INCLUDED)
Wall Anchor x 2

 
HARDWARE AND COMPONENTS

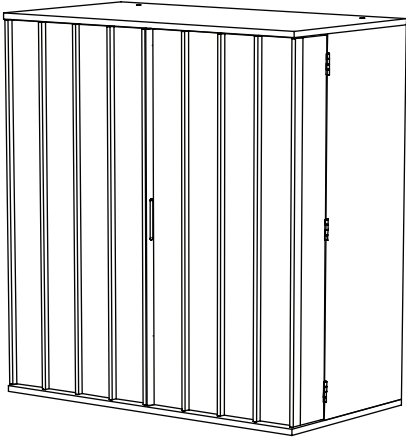

PART #	A1
DESCRIPTION	Cabinet
QUANTITY	1

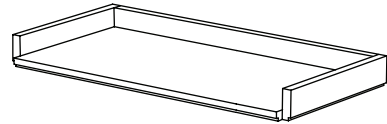 

PART #	A2
DESCRIPTION	Lower Shelf
QUANTITY	1

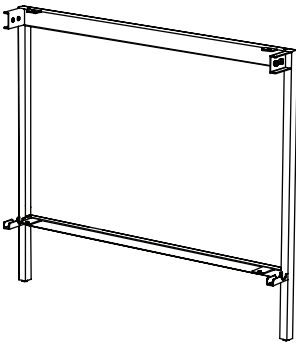 

PART #	C1
DESCRIPTION	Base Frame
QUANTITY	2



PART #	C2
DESCRIPTION	Top Connector Tube
QUANTITY	2



PART #	C3
DESCRIPTION	Bottom Connector Tube
QUANTITY	2



PART #	C5
DESCRIPTION	Anti-skid Panel
QUANTITY	2



PART #	C6
DESCRIPTION	Middle Drawer Liner
QUANTITY	1





PART #	C7
DESCRIPTION	Side Drawer Liner
QUANTITY	2

ASSEMBLY

STEP 1. BUILD THE BASE

 Position **(C1) Base Frame** on the floor with tabs facing up. Slide both **(C2) Top Connector Tubes** onto the 2 large U shaped tabs of **(C1) Base Frame** making sure the holes are facing inside. Slide both **(C3) Bottom Connector Tubes** onto the 2 small U shaped tabs of **(C1) Base Frame** with holes facing down. Attach connector tubes using **8 (H1) Screws**. Sleeve the other **(C1) Base Frame** over the assembly as shown below and tighten all **16 (H1) Screws** with **(T1) Hex Wrench**.

	PART/DESCRIPTION	QTY
	T1-HEX WRENCH	1
	H1-SCREW	16

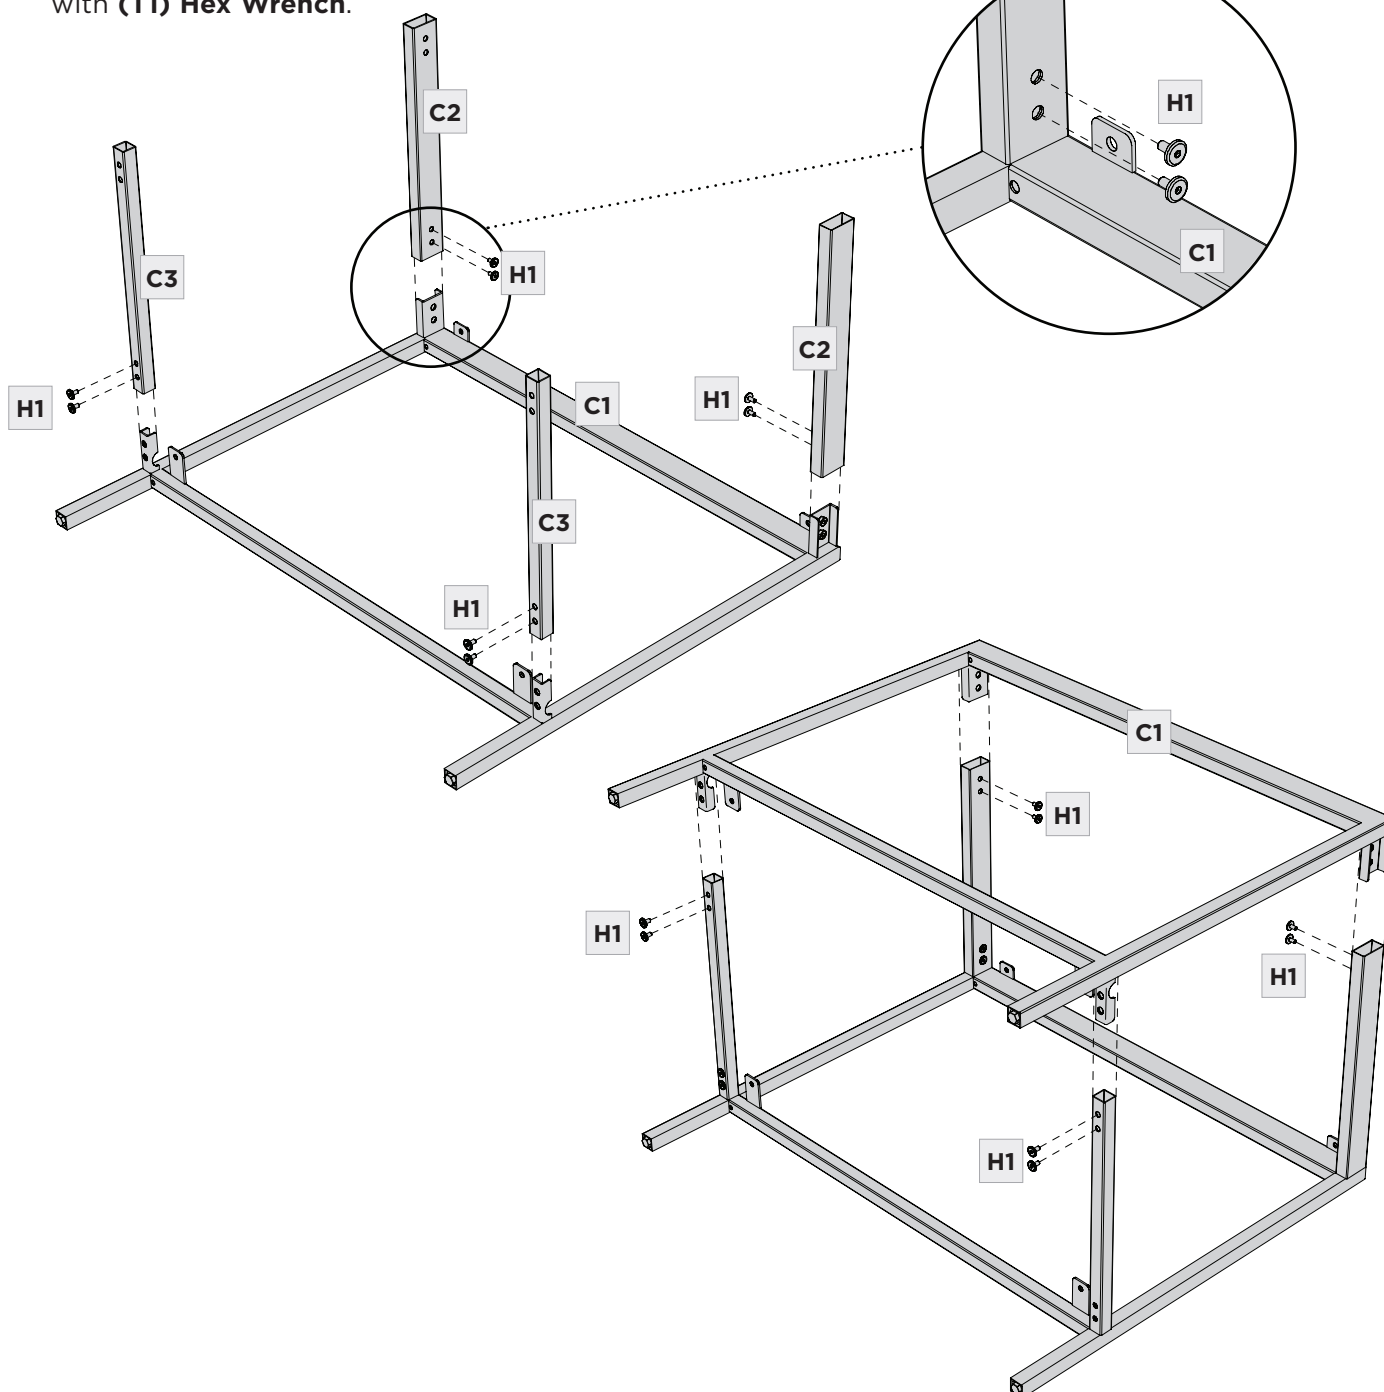 

STEP 2. ATTACH THE BASE

2 PERSON TASK




ASSEMBLY


With help from another person, carefully position the **(A1) Cabinet** onto at least **two layers of packing material** and orient on its **back** as shown.

NOTE: the packing material **creates finger space** to lift the cabinet after attaching the base.


Position the **base** as shown and attach with **4 (H1) Screws** and tighten with **(T1) Hex Wrench**.

	PART/DESCRIPTION	QTY
	T1-HEX WRENCH	1
	H1-SCREW	4

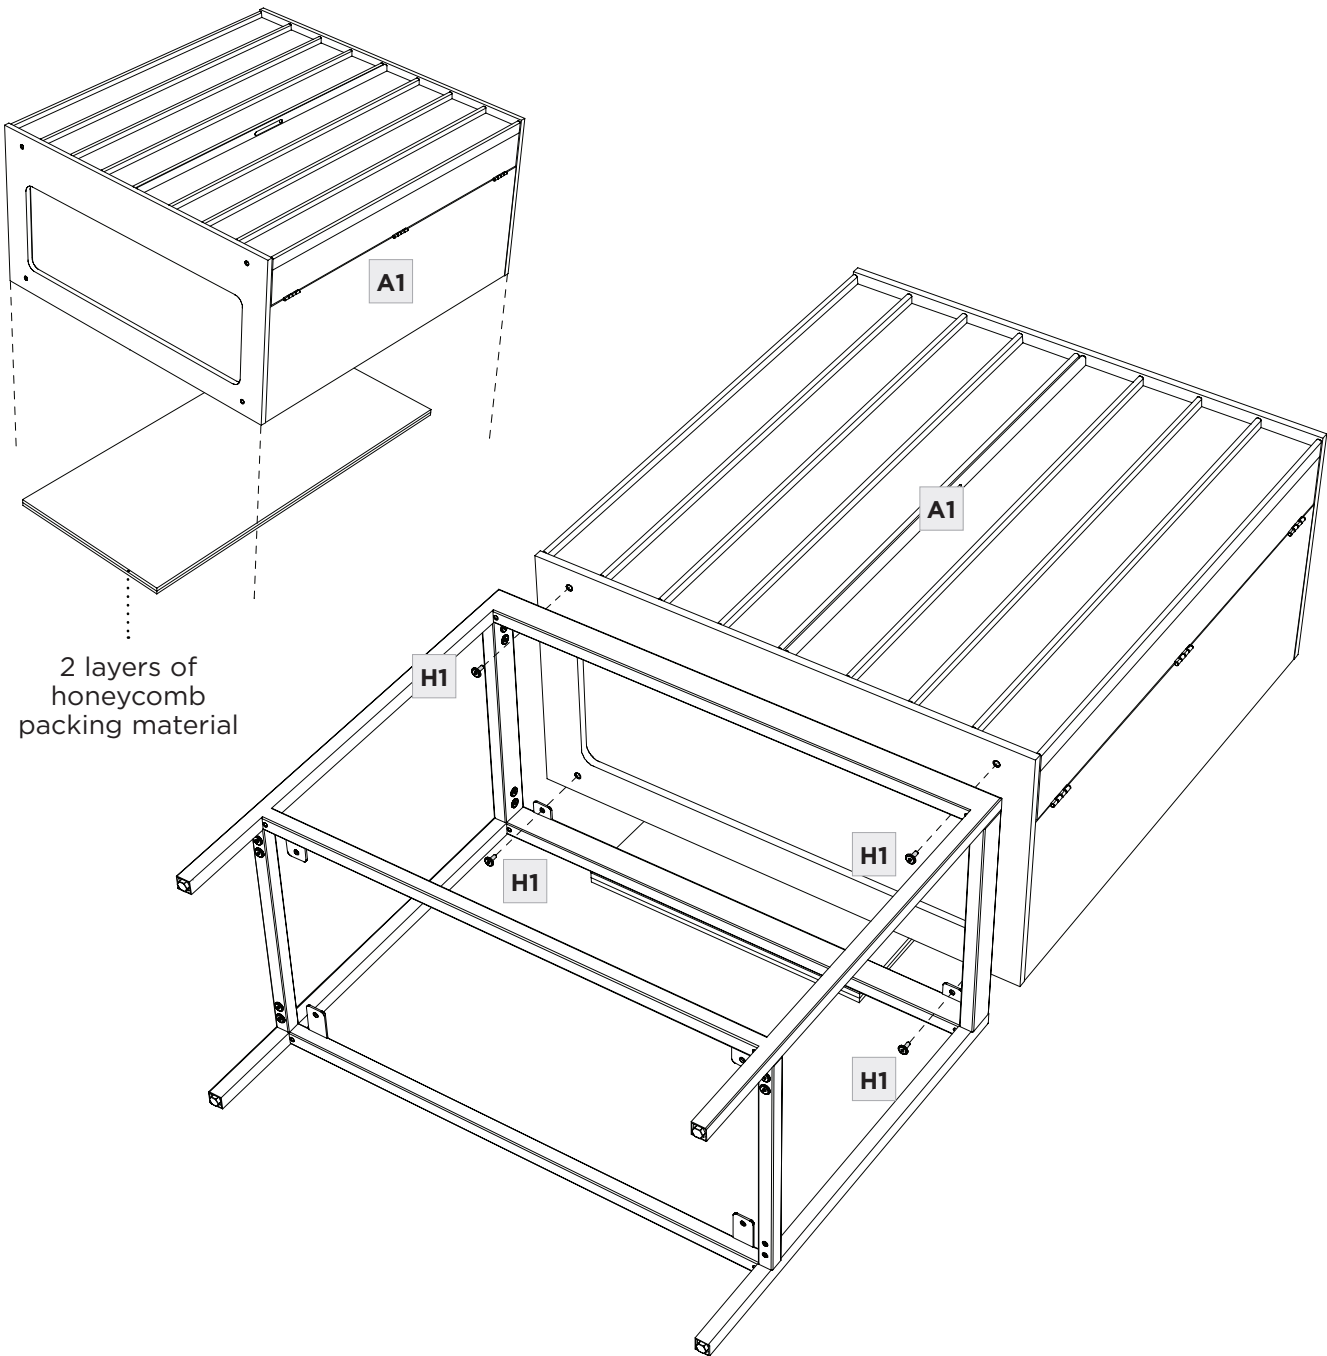 

 

 Position the **(C5) Anti-skid Pads** under the back legs as indicated with **arrow #1** making sure that the **(C5) Anti-skid Pads** are **centered** on the end of the legs. With 2 people (1 person on each side) carefully and slowly lift the cabinet with **hands** placed along the edges of the cabinet indicated with **arrow #2**.

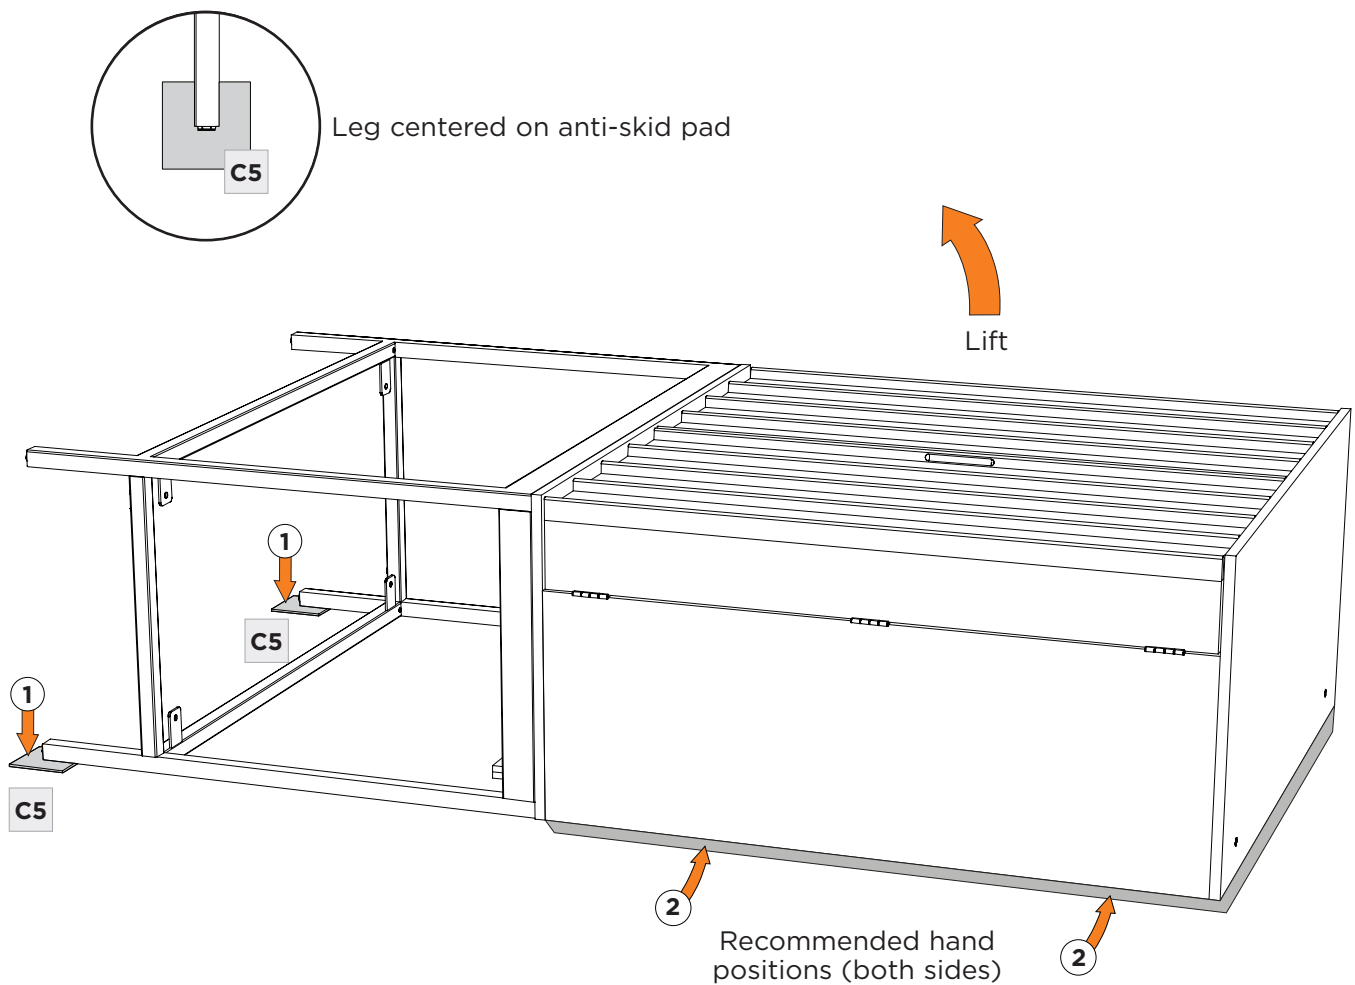


STEP 4. PREPARE THE WALL

ASSEMBLY

⚠ WARNING DO NOT ALLOW CHILDREN TO SWING ON THE OPEN DOORS.

 To ensure stability, it is **required** that you anchor your Cosmo Bar to the wall using the two (H3) Anchor Straps included. Determine the desired location of your Cosmo Bar and then position the bar 24" in front of the wall. Mark the wall and insert **2 wall anchors** (not included) in the position indicated below.


 

	PART/DESCRIPTION	QTY
	NOT INCLUDED Wall Anchor	2

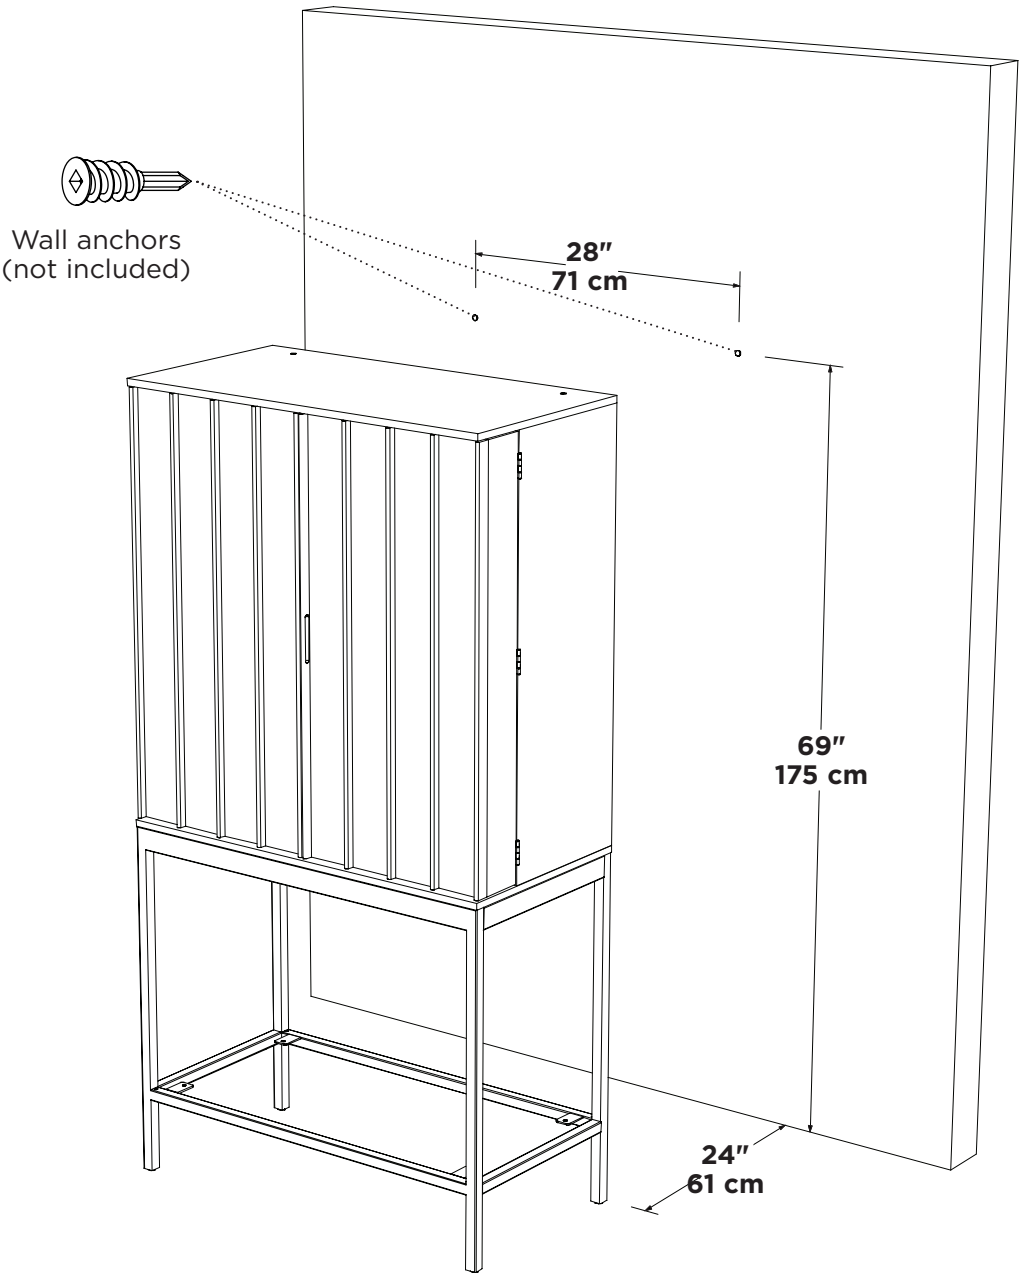


ASSEMBLY

STEP 5. ATTACH TO WALL

Attach 1 end of the **(H3) Anchor Straps** to the wall. Carefully move your Cosmo bar close to the wall and attach the loose end of the **(H3) Anchor Straps** to the top of the cabinet using **(H1) Screws** going into the threaded inserts as shown. Tighten with **(T1) Hex Wrench**.

	PART/DESCRIPTION	QTY
	T1-HEX WRENCH	1
	H1-SCREW	2
	H3-ANCHOR STRAP	2



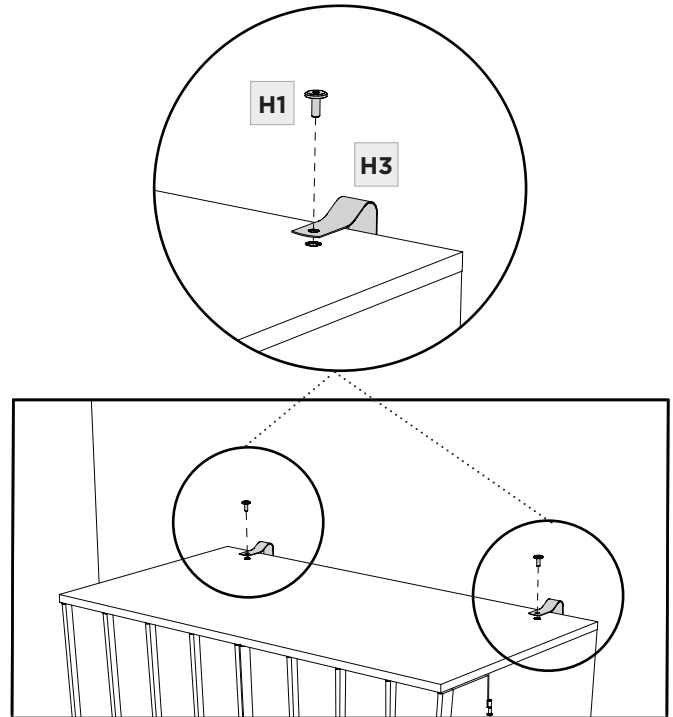 


ASSEMBLY

STEP 6. INSTALL LOWER SHELF

   Tilt the **(A2) Lower Shelf** as shown, insert the shelf into the front opening of the base and rotate carefully down onto the lower cross bars of the frame. Attach the **(A2) Lower Shelf** with **4 (H1) Screws** and tighten with **(T1) Hex Wrench**.

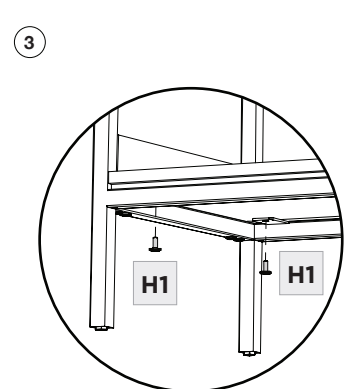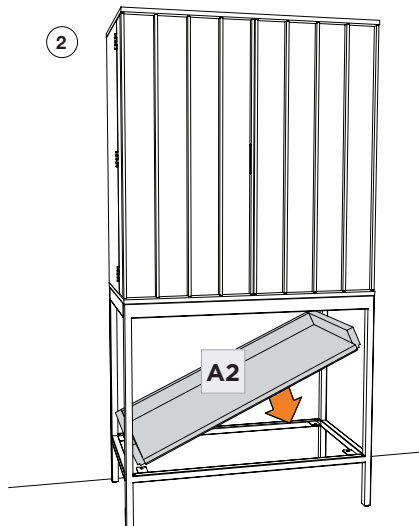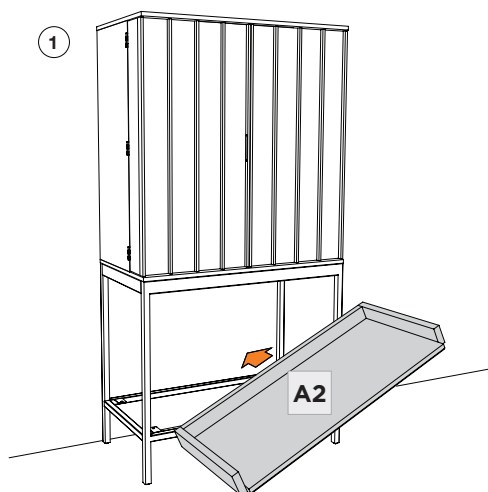

	PART/DESCRIPTION	QTY
	T1-HEX WRENCH	1
	H1-SCREW	4





STEP 7. INSTALL RECHARGEABLE STRIP LIGHT

ASSEMBLY

Find the **(H4) Rechargeable Strip Light**. Using the **(H5) Micro HDMI/USB cable**, charge the light for 6 hours. Once charged, install it onto the **metal strip** (it is held with magnets) located in the angled recess towards the top front of the cabinet. **Turn on switch** on end of light. The light is designed to turn on with movement. It takes 30 seconds of stillness for the light to turn off by itself.


	PART/DESCRIPTION	QTY
	H4-STRIP LIGHT	1
	H5-CHARGE CORD	1

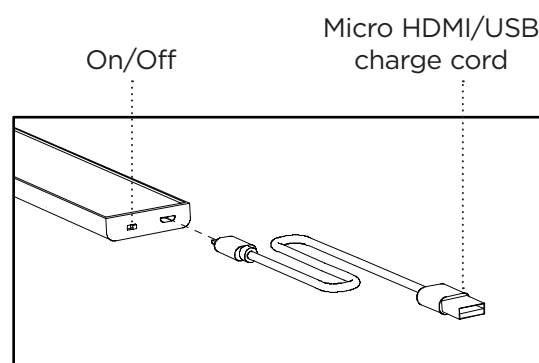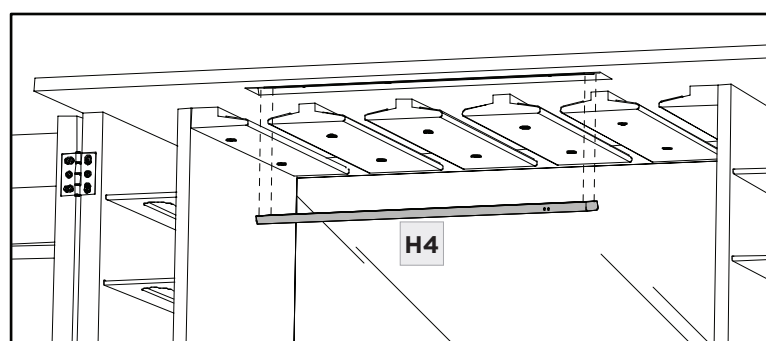  


STEP 8. INSTALL DRAWER LINER / MAGNETIC DOOR CATCH

ASSEMBLY

 Open the push-open drawer and install **(C6) Middle Drawer Liner** and both **(C7) Side Drawer Liners**. Using a **Slotted Screwdriver** (not included), unscrew the **magnetic door catches** a few turns until they make contact with and hold the doors shut.

	PART/DESCRIPTION	QTY
	NOT INCLUDED Slotted Screwdriver	1

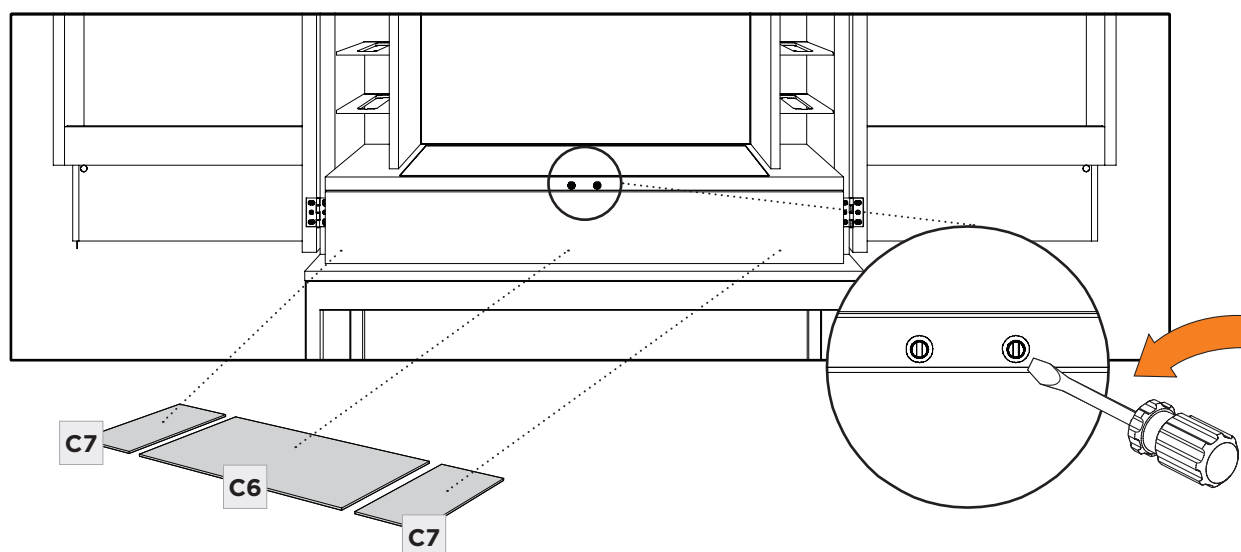 


FINE TUNING

ADJUST SHELF—IF NEEDED

Adjust the height of the adjustable shelf if needed by moving the positions of the **shelf pins**.


	PART/DESCRIPTION	QTY
	T2-LEVELER WRENCH	1

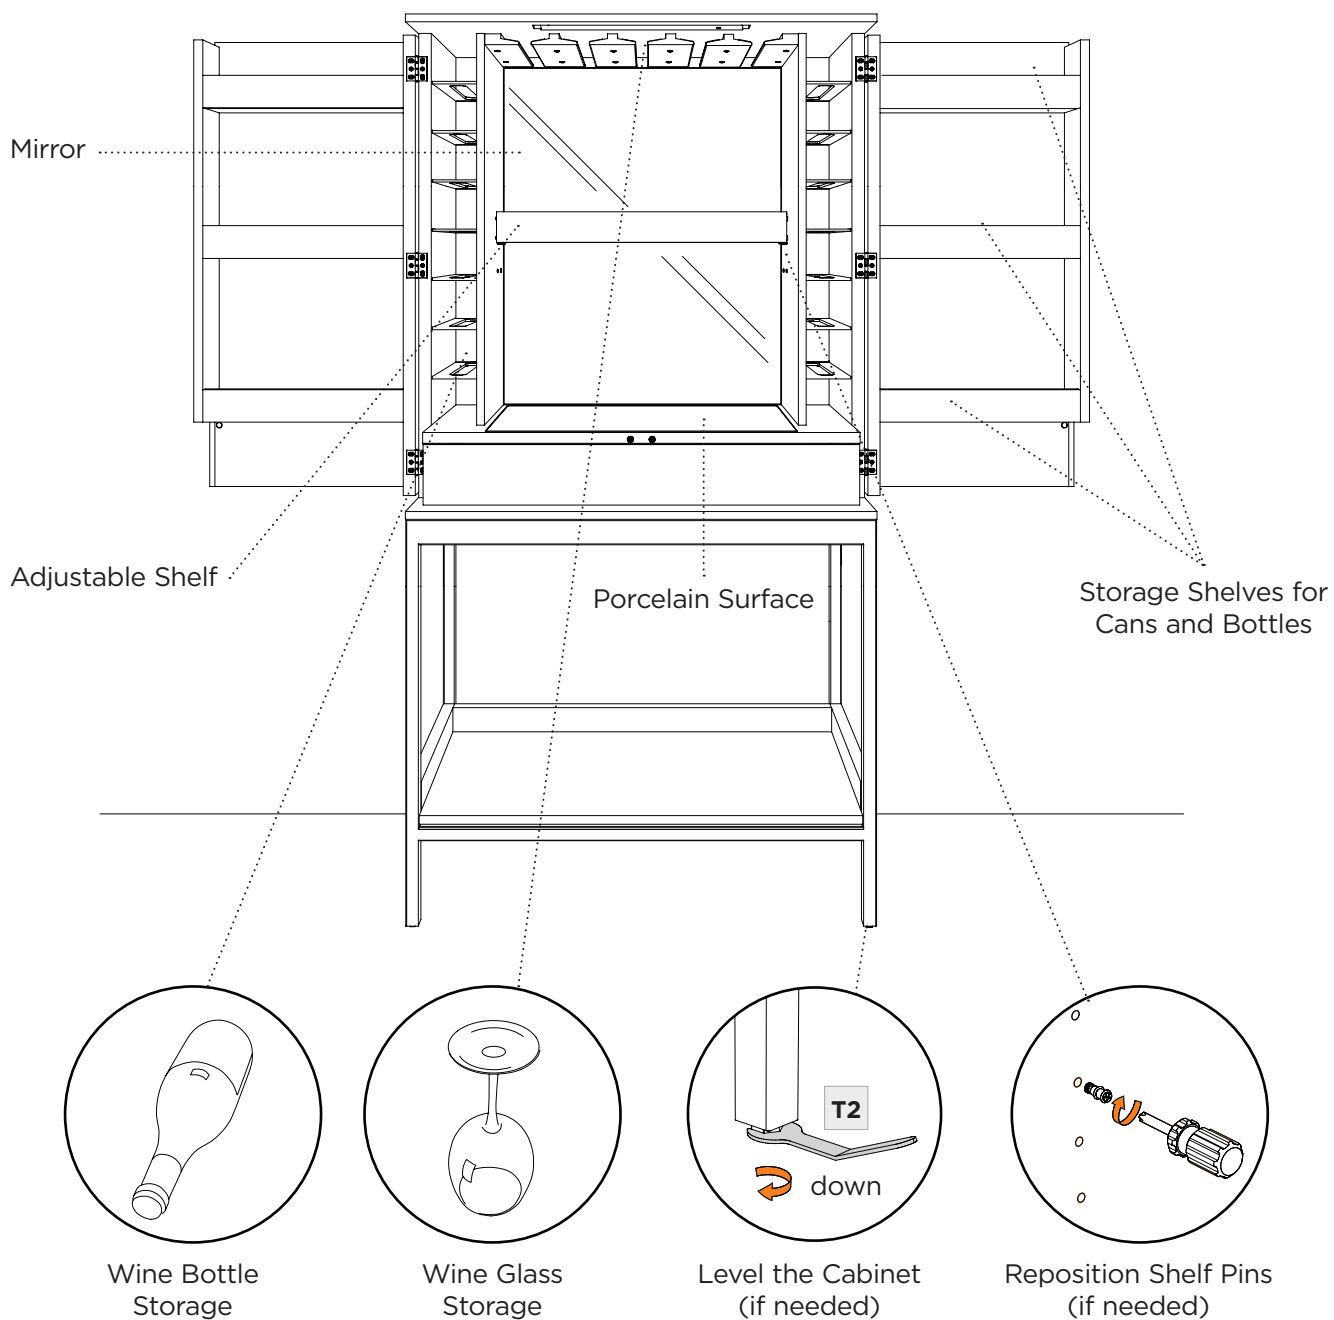 

Check to make sure your Cosmo Bar is level. If it is not, adjust the levelers located under the front legs using **(T2) Leveler Wrench**.

With both doors closed, check to see if the top corners of the doors align. If not, dial out the corresponding front leveler under the door that is sagging.

 
EXAMPLE: if the door on the right is low, dial out the right front leveler to raise the door back into alignment with the left door.

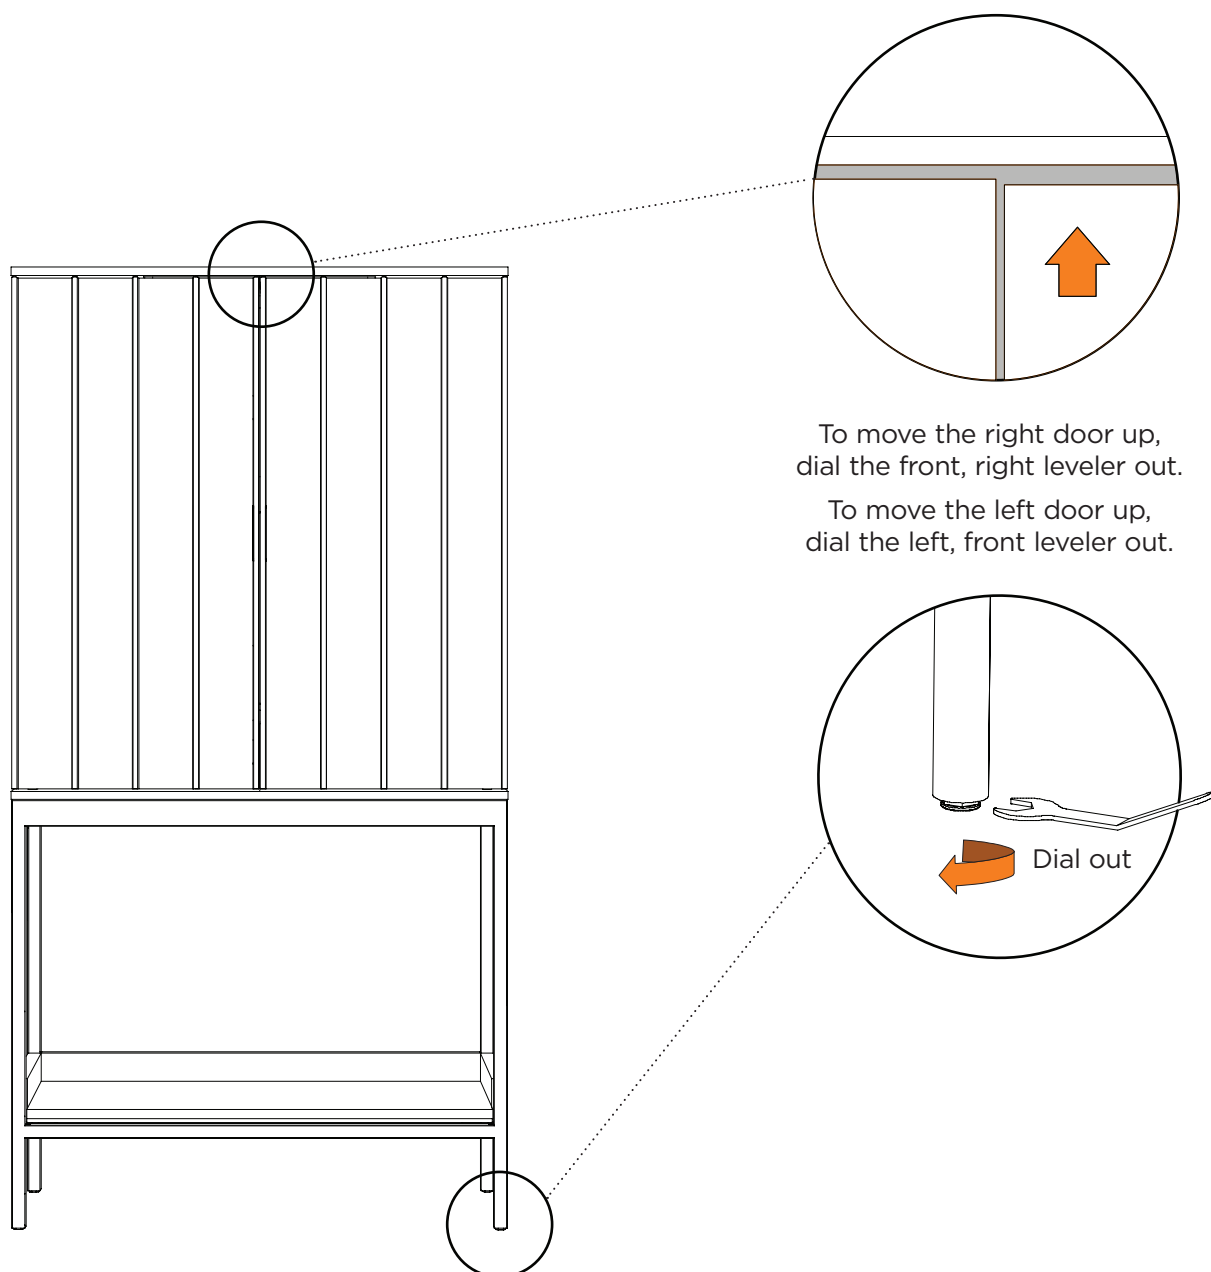


FINE TUNING

ADJUST DRAWER—IF NEEDED

 
The drawer on your Cosmo Bar is adjustable as much as 2mm up, down, left, right, back or forward. If the drawer is out of alignment, follow the steps below:

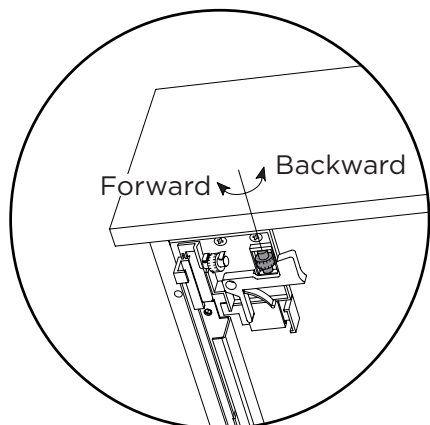

 1) Rotating the **black** wheel towards the inside of the drawer moves the drawer backward, deeper into the cabinet.

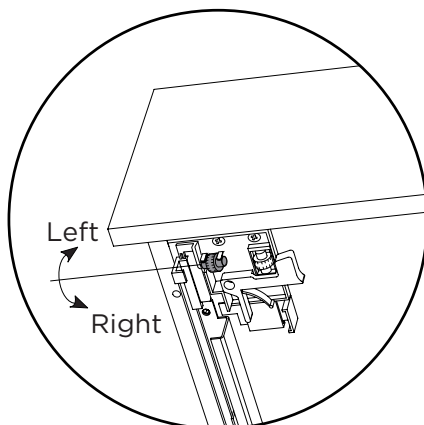

 2) Rotating the **white** wheel towards you moves the drawer to the left. Rotating away moves it right.


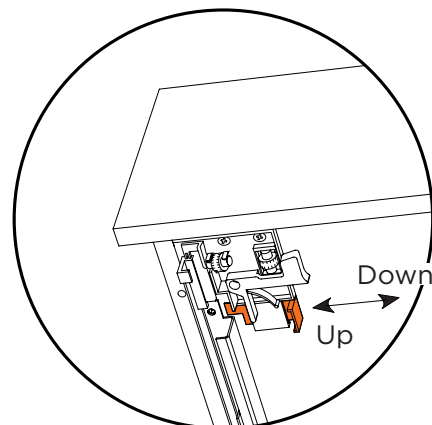


3) Pushing the **orange** lever towards the outside wedges the drawer up. Pulling it towards the middle of the drawer moves the drawer down.


FINE TUNING

CLEANING

  If a spill occurs, the porcelain surface on your Cosmo Bar may be removed for cleaning. To remove, open the drawer about 8", reach inside and find the 60mm disc just under the front center edge of the porcelain. Rotate the disc 180 degrees. Lift the porcelain out by pushing up from below.

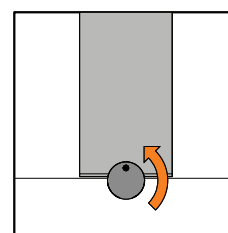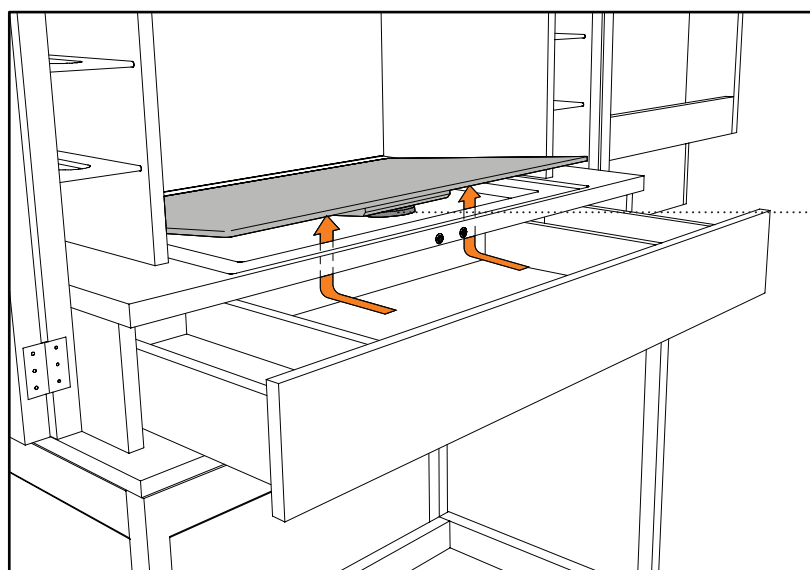

Rotate Disc to Unlock

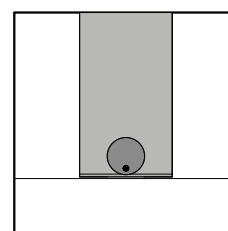 

Unlocked Position

GLASS

Glass surface is maintained using household glass cleaner and a paper towel or cloth.

SATIN-ETCHED GLASS

This uniquely smooth-to-the-touch glass surface can be regularly maintained using household glass cleaner and a paper towel or cloth. Minor scratches or scuffs not eliminated using paper towel or cloth can usually be removed by using a 'Magic Eraser'. Magic Eraser is a melamine foam product available at any grocery store or home improvement center. Dampen the entire glass surface as well as the Magic Eraser, then rub the entire glass surface in broad, even strokes using moderate pressure. Clean and dry the surface with a paper towel. Check for results and repeat as necessary.

Any scratches or scuffing not eliminated by one of the above methods can often be addressed by 'refreshing' the glass. This is a process that should not be required more than once per 6-12 months. See this brief video for the simple method: www.bdiusa.com/glass

WOOD

Wood surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. Do not use glass cleaner on wood. If moisture remains, dry the surface with another cloth. If needed, a gentle non-abrasive cleanser may be used, but be sure to wipe away all cleaner residue and dry the surface with a cloth.

BDI's wood finishes feature natural hardwood solids and veneers. Wood is a product of nature and—unlike man-made materials that can be manufactured to strict and consistent specifications—has natural imperfections that are part of its appeal and character. Every piece of wood differs from every other, even when coming from the very same tree. As such, variation in grain, texture and tone should be expected from one panel or piece of furniture to the next.

While BDI's stained wood finishes are stable in tone & appearance, all finishes are subject to some degree of discoloration with prolonged exposure to direct sunlight. Please take care to avoid positioning your BDI cabinet in any area with extensive direct sunlight. To learn more about the features of natural wood, visit www.bdiusa.com/wood

METAL & PAINTED SURFACES

Surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. If moisture remains, dry the surface with another cloth. If needed, a gentle non-abrasive cleanser may be used, but be sure to wipe away all cleaner residue and dry the surface with a cloth.

WARRANTY

BDI warrants to the original purchaser that for the below stated warranty term, BDI will repair or replace any product, part, or component covered by this warranty which fails under normal use as a result of a defect in material or workmanship. BDI will repair or replace the aforementioned product, part or component with a comparable product, part or component. The decision to repair or replace will be at BDI's sole discretion.

BDI Home Theater Furniture, Office Furniture, Modular Systems, Tables and other furniture pieces are warranted for three (3) years from the date of purchase as shown on your sales receipt. The warranty period starts from the date of purchase. This warranty extends only to the original purchasers who acquire new product from BDI Authorized Resellers. Any product, part, or component must have been assembled, installed, used, and maintained according to BDI's published instructions in order to be eligible for warranty coverage. Any modification to the original product voids the warranty.

To view BDI's complete warranty information, visit www.bdiusa.com/warranty

PRODUCT REGISTRATION

Registering your new BDI product allows us to send you important product updates, service information and helpful hints related to your BDI products. Register today, and you will be entered to win free a BINK table from BDI: www.bdiusa.com/register



WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT TIP-OVER:

- Install tip-over restraint.
- Place heaviest items in lower compartments.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

USE OF TIP-OVER RESTRAINT MAY REDUCE—BUT NOT ELIMINATE—THE RISK OF TIP-OVER.



BDIUSA.COM

These distinctive product configurations are protected by US and international patents, trade dress, and/or copyright laws. Cosmo & BDI are trademarks of Becker Designed, Inc. All rights reserved. ©2020, BDI | V.10.22.2020

Made in China.