


COSMO™ 5729

CONSOLE

INSTRUCTION MANUAL

LET'S GET STARTED.

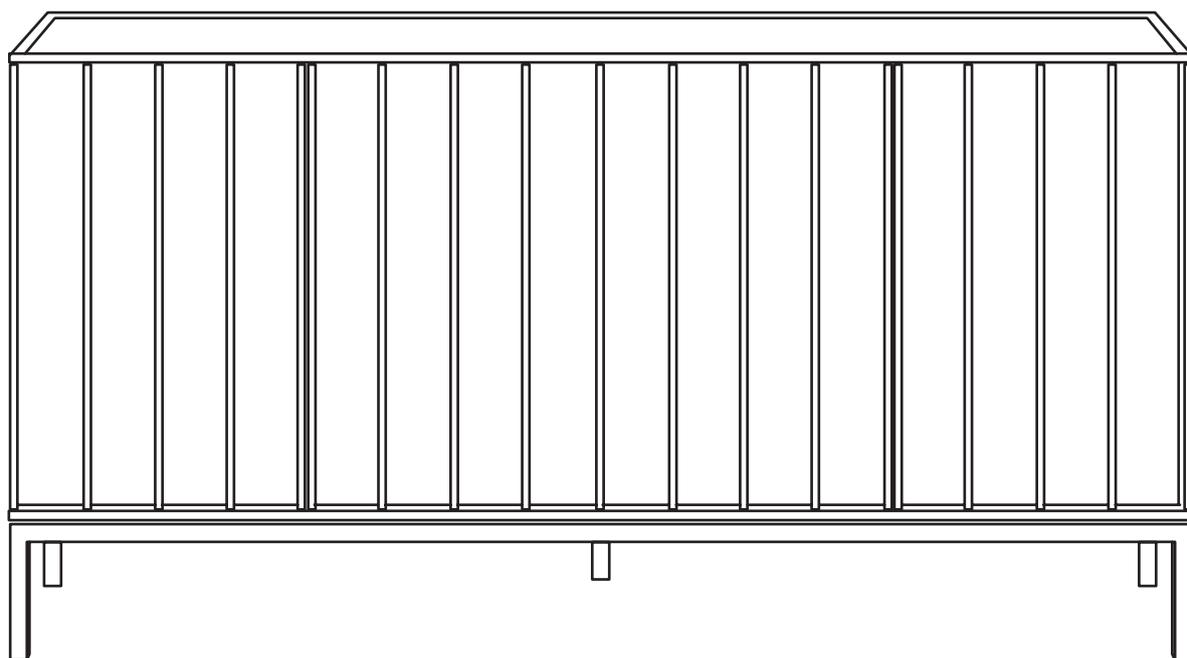

DESIGN MATTHEW WEATHERLY

BDi

BDIUSA.COM



Congratulations on the purchase of your Cosmo Console 5729 from BDI. Your console has been designed to provide a lifetime of enjoyment. This manual will provide you with assembly instructions and other helpful information that will ensure that you get the most out of your cabinet. Please save it for future reference.

Your Cosmo Console has been engineered for simple assembly. It is designed for indoor use on level floors. Clean wood, metal, and porcelain surfaces with a damp cloth. Please follow these directions carefully to prevent any damage.

Should you need further assistance, contact BDI at customerservice@bdiusa.com.


ENJOY!

HARDWARE AND COMPONENTS


Unpack and identify the parts listed below. The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces, please contact BDI Customer Service at customerservice@bdiusa.com.

Do not use power tools for assembly of this product.


For all other concerns, please contact your BDI retailer.

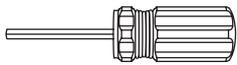


PART #	T1
DESCRIPTION	Hex Driver
QUANTITY	1

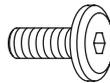

PART #	H1
DESCRIPTION	M6 x 12mm Screw
QUANTITY	10

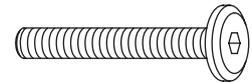


PART #	H2
DESCRIPTION	M6 x 35mm Screw
QUANTITY	2

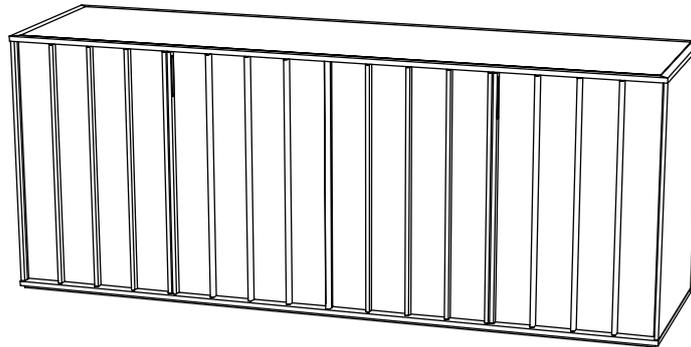


PART #	A1
DESCRIPTION	Cabinet
QUANTITY	1


HARDWARE AND COMPONENTS

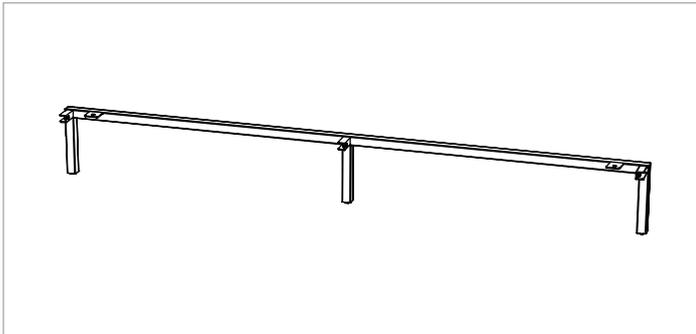


PART #	C1
DESCRIPTION	Back Base Frame
QUANTITY	1

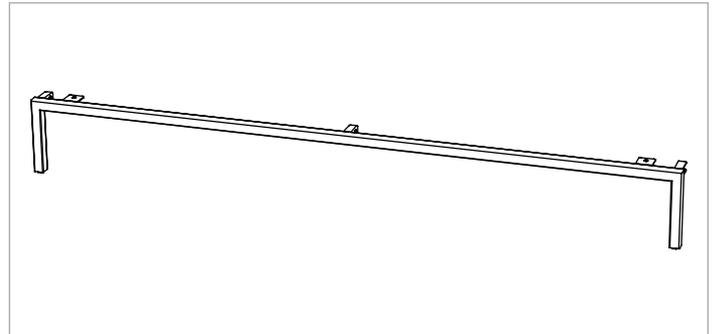


PART #	C2
DESCRIPTION	Front Base Frame
QUANTITY	1

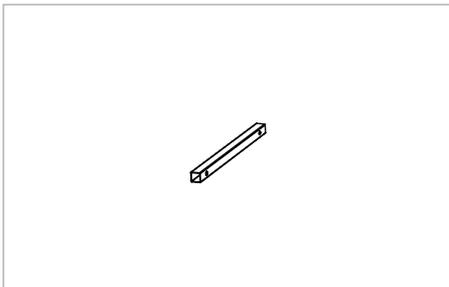

PART #	C3
DESCRIPTION	Connector Tube
QUANTITY	3

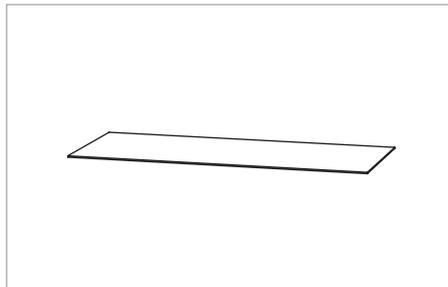


PART #	C5
DESCRIPTION	Drawer Liner
QUANTITY	2

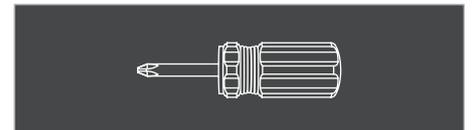


TOOL REQUIRED (NOT INCLUDED)

Phillips Screwdriver


Position the **(C2) Front** and **(C1) Back Base Frames** as shown. Position the **(3) (C3) Connector Tubes** as shown—no holes should be visible on the outside ends. Slide the metal tabs into the ends of the connector tubes. Attach **(C1 & C2) Base Frames** to **(C3) Connector Tubes** using **(6) (H1) Screws**. Tighten with **(T1) Hex Driver**.

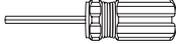	PART/DESCRIPTION	QTY
	T1-HEX DRIVER	1
	H1-SCREW	6

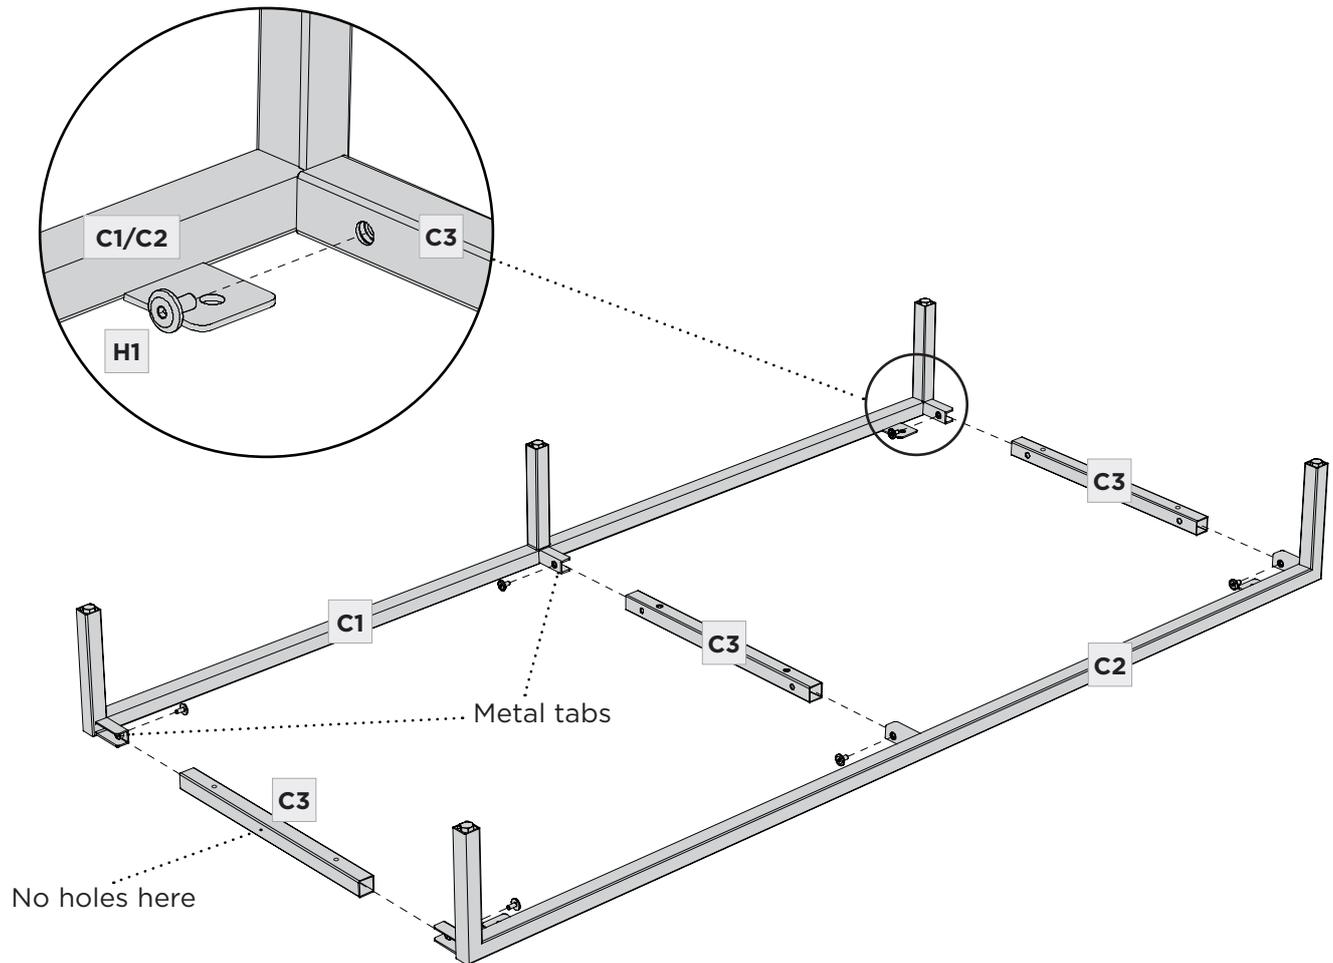


STEP 2. ATTACH THE BASE


2 PERSON TASK

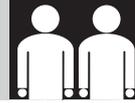

ASSEMBLY

Make sure the packing material bracing the 2 inner shelves is still in place before rotating the cabinet. With help from another person, carefully position **(A1) Cabinet** on its back. Attach the **base** as shown using the **(4) (H1) Screws** (at the corners) and **(2) (H2) Screws** through the **(C3) Middle Connector Tube**. Tighten all screws using the **(T1) Hex Driver**.

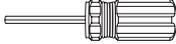	PART/DESCRIPTION	QTY
	T1-HEX DRIVER	1
	H1-SCREW	4
	H2-SCREW	2

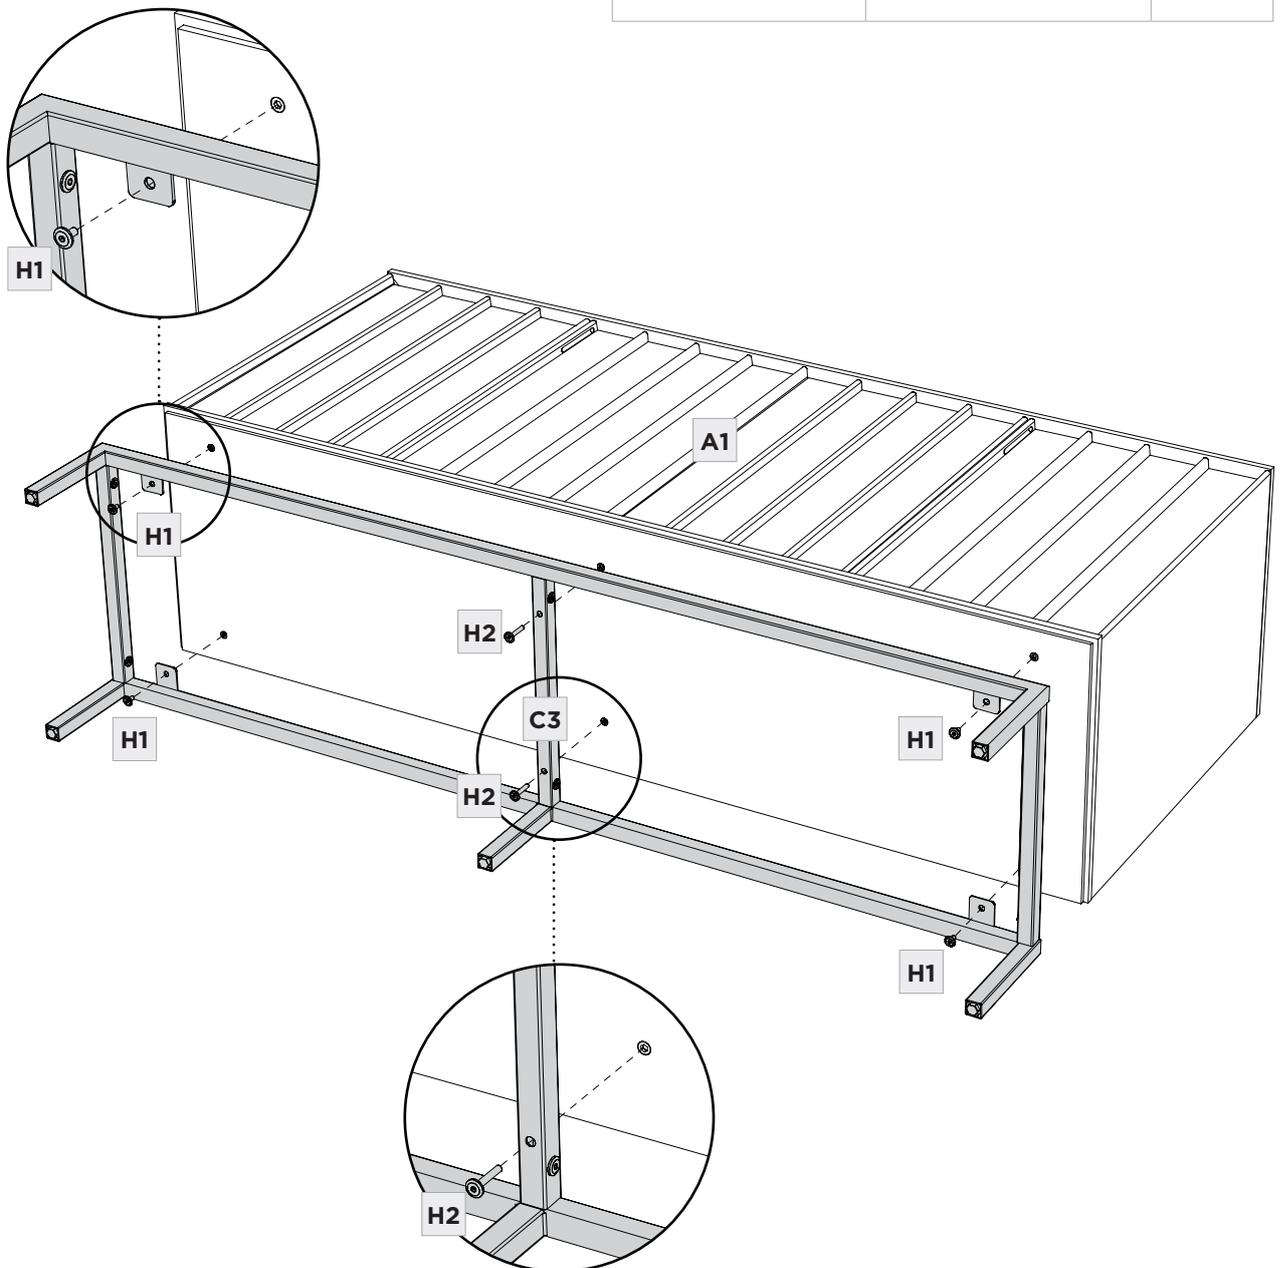


Place one **(C5) Drawer Liner** into each drawer.

Check to make sure your Cosmo Console is level. Levelers are located underneath each leg and can be dialed up or down to level the unit if necessary (see below).

	PART/DESCRIPTION	QTY
	NOT INCLUDED Phillips Screwdriver	1


The shelves may be positioned at any of the available locations corresponding with threaded inserts inside the cabinet by moving the **Shelf Pins**. Use a **Phillips Driver** to loosen, reposition, and re-tighten the **Shelf Pins**.

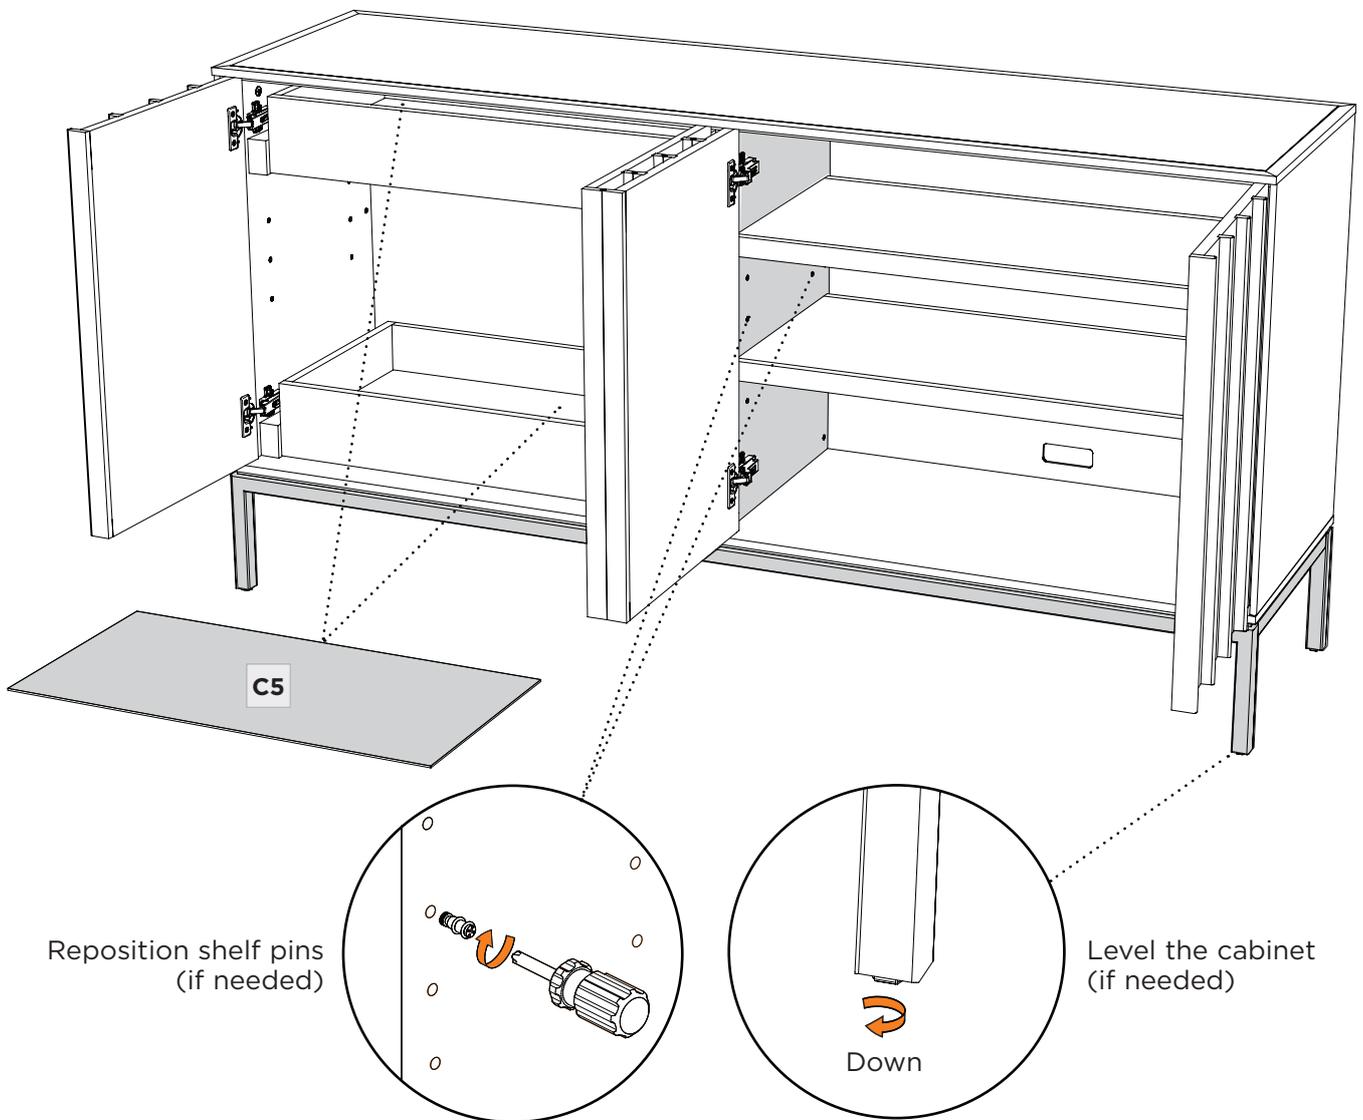

These steps are to be followed after you have unpacked and completed the simple assembly instructions for your Cosmo Console. Due to jostling in freight or perhaps an uneven floor, the doors on your Cosmo console may not appear to be in perfect alignment. Making a few minor adjustments can rectify this situation. Be aware that depending on your situation, patience and a bit of trial and error are required. The high-quality European hinge hardware is infinitely adjustable, but changing one element can cause the need for further adjustments. Through a little adjustment, you can modify the orientation of the cabinet doors to make sure that they are sitting perfectly.



INCORRECT!
Door is out of alignment with the rest of the unit.

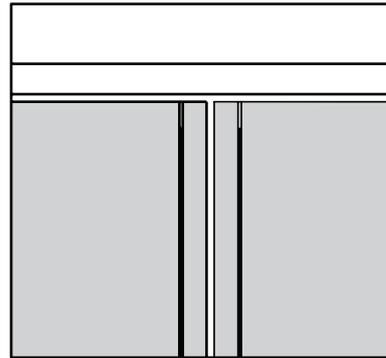

CORRECT!
Door is sitting squarely and evenly spaced on tops and sides.


The doors on your cabinet should be evenly spaced and the doors should open and close freely without rubbing against the door frame.


If the cabinet's doors appear out of alignment, this condition can be corrected with minor adjustment to the European hinges on each door.

Because these hinges are infinitely adjustable, adjusting one hinge element can sometimes cause the need for adjustments to other elements. But with a few adjustments, you can modify the orientation of the cabinet doors to make sure that they hang perfectly within your cabinet.


Use a **Phillips Screwdriver** to adjust Cosmo's door hinges:

- By adjusting **Screw 1**, the door will move LEFT or RIGHT within the frame. Make minor adjustments at both top and bottom hinges for best results.
- By adjusting **Screw 2** the entire door will move IN or OUT, opening or closing the gap between the door frame and cabinet. (This screw rarely needs adjustment.)

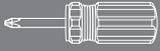
	PART/DESCRIPTION	QTY
	NOT INCLUDED Phillips Screwdriver	1

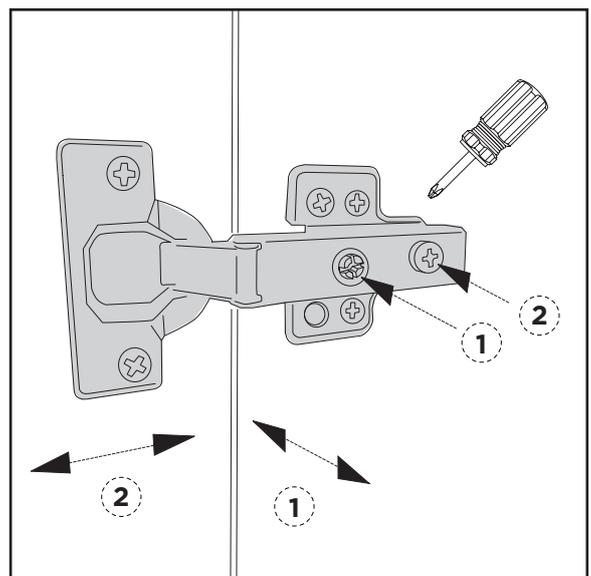


The 2 drawers on your Cosmo Console are adjustable as much as 2mm up, down, left, right, back or forward. If the drawers are out of alignment, follow the steps below:

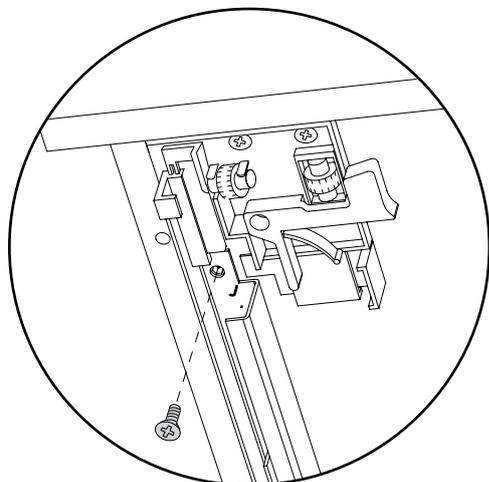


- 1) Removing this **screw** allows the drawer to be adjusted (or removed)

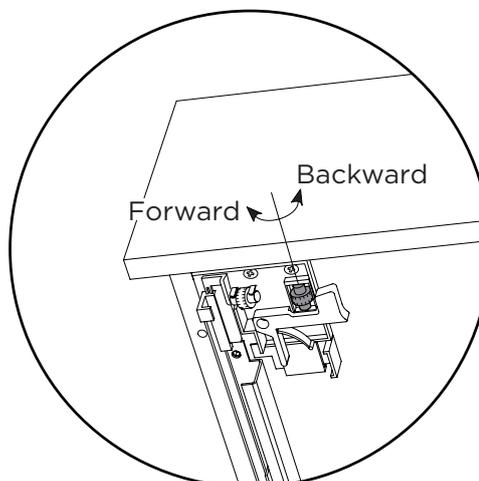

- 2) Rotating the **black** wheel towards the inside of the drawer moves the drawer backward, deeper into the cabinet.

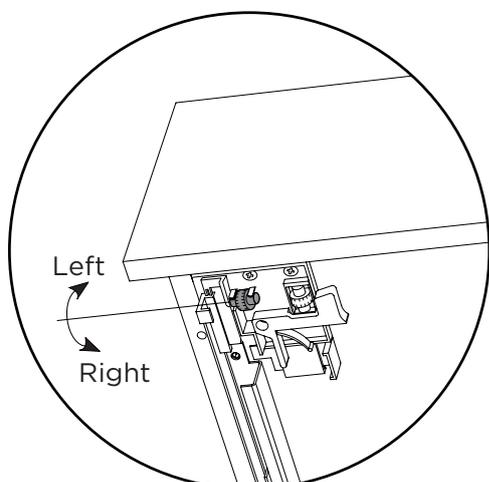

- 3) Rotating the **white** wheel towards you moves the drawer to the left. Rotating away moves it right.

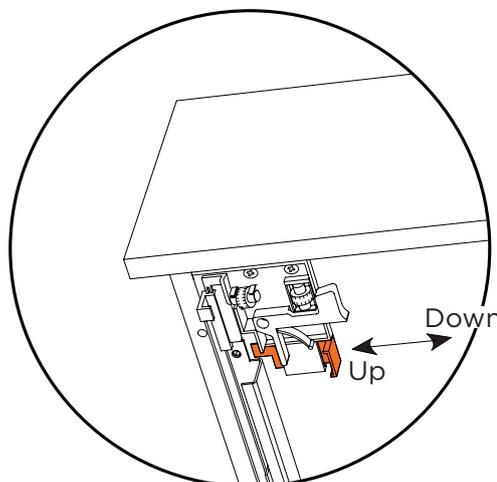


- 4) Pushing the **orange** lever towards the outside wedges the drawer up. Pulling it towards the middle of the drawer makes the drawer drop.

Your Cosmo Console features a durable, heat resistant porcelain top. The top may be cleaned with mild soapy water on a damp cloth. If liquid spills into the seam, the porcelain top may be removed for cleaning purposes, or may be replaced in case of damage.


To remove the porcelain:

1. Open all 4 doors, partially open the upper left drawer.
2. Using a **Phillips Screwdriver**, remove the screw (indicated below) from each front corner of the drawer.
3. To remove the drawer, place your fingers under each front corner of the drawer and **pull the orange lever** towards you while lifting upward.


	PART/DESCRIPTION	QTY
	NOT INCLUDED Phillips Screwdriver	1

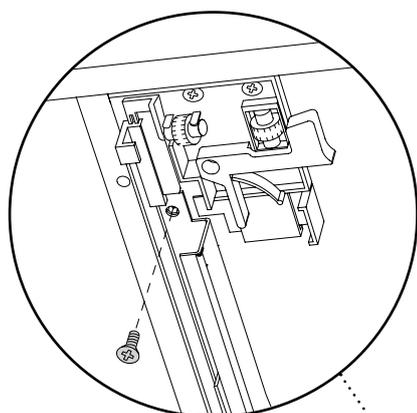


Removing this screw allows the drawer to be removed

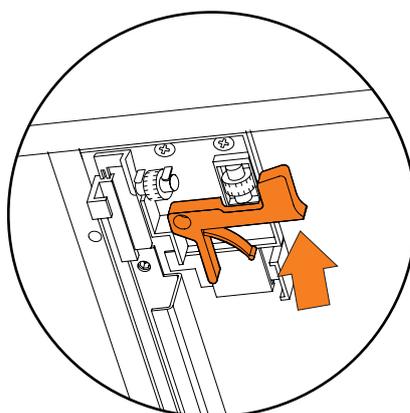

After removing the screw, reach below the front corners of the drawer and pull levers towards you to lift the drawer out

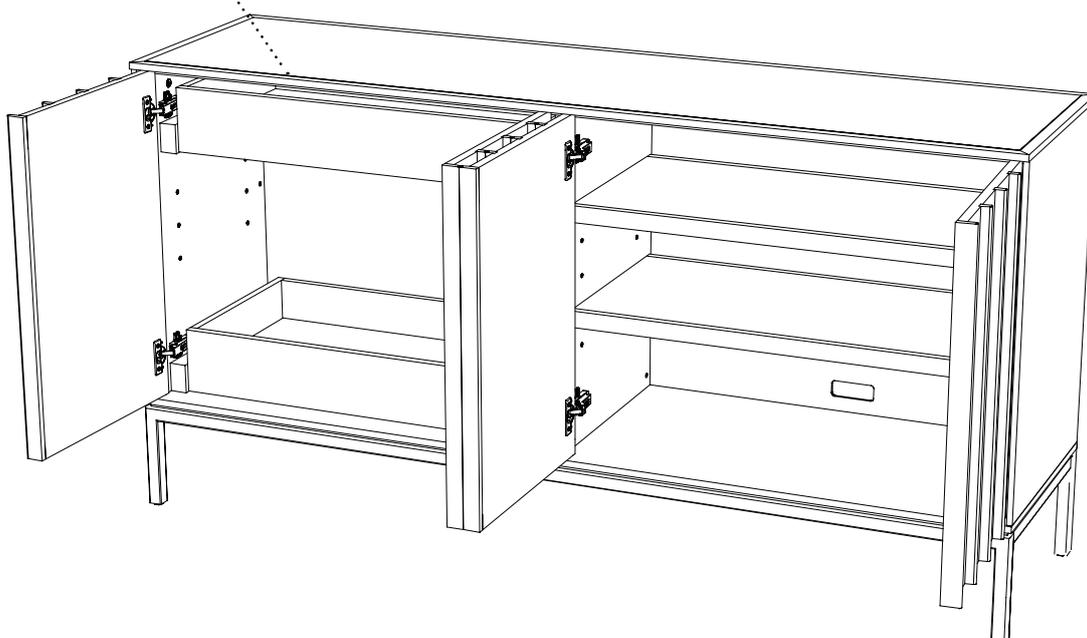


4. Locate the **4 Metal Plates** that connect the porcelain to the cabinet.
5. Use **(T1) Hex Driver** to remove all screws holding the metal plates.
6. Once all four metal plates are removed, the porcelain top may be lifted out by pushing up from below as shown—**arrow #2**.

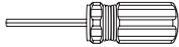	PART/DESCRIPTION	QTY
	T1-HEX DRIVER	1

After cleaning, re-insert the porcelain top and re-attach the 4 metal plates.

To reattach the drawer, place the drawer directly on top of the metal drawer slides and slowly push the drawer all the way in until it “snaps” back on.

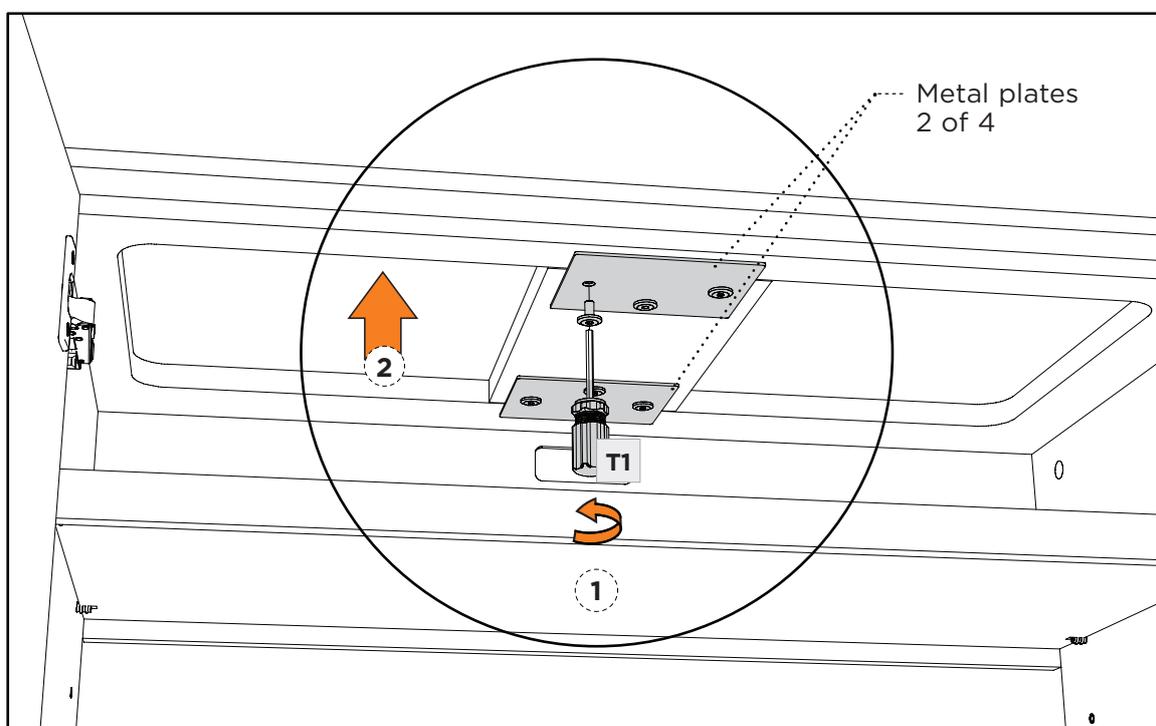

GLASS

Glass surface is maintained using household glass cleaner and a paper towel or cloth.

SATIN-ETCHED GLASS

This uniquely smooth-to-the-touch glass surface can be regularly maintained using household glass cleaner and a paper towel or cloth. Minor scratches or scuffs not eliminated using paper towel or cloth can usually be removed by using a 'Magic Eraser'. Magic Eraser is a melamine foam product available at any grocery store or home improvement center. Dampen the entire glass surface as well as the Magic Eraser, then rub the entire glass surface in broad, even strokes using moderate pressure. Clean and dry the surface with a paper towel. Check for results and repeat as necessary.

Any scratches or scuffing not eliminated by one of the above methods can often be addressed by 'refreshing' the glass. This is a process that should not be required more than once per 6-12 months. See this brief video for the simple method: www.bdiusa.com/glass

WOOD

Wood surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. Do not use glass cleaner on wood. If moisture remains, dry the surface with another cloth. If needed, a gentle non-abrasive cleanser may be used, but be sure to wipe away all cleaner residue and dry the surface with a cloth.

BDI's wood finishes feature natural hardwood solids and veneers. Wood is a product of nature and—unlike man-made materials that can be manufactured to strict and consistent specifications—has natural imperfections that are part of its appeal and character. Every piece of wood differs from every other, even when coming from the very same tree. As such, variation in grain, texture and tone should be expected from one panel or piece of furniture to the next.

While BDI's stained wood finishes are stable in tone & appearance, all finishes are subject to some degree of discoloration with prolonged exposure to direct sunlight. Please take care to avoid positioning your BDI cabinet in any area with extensive direct sunlight. To learn more about the features of natural wood, visit www.bdiusa.com/wood

METAL & PAINTED SURFACES

Surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. If moisture remains, dry the surface with another cloth. If needed, a gentle non-abrasive cleanser may be used, but be sure to wipe away all cleaner residue and dry the surface with a cloth.

WARRANTY

BDI warrants to the original purchaser that for the below stated warranty term, BDI will repair or replace any product, part, or component covered by this warranty which fails under normal use as a result of a defect in material or workmanship. BDI will repair or replace the aforementioned product, part or component with a comparable product, part or component. The decision to repair or replace will be at BDI's sole discretion.

BDI Home Theater Furniture, Office Furniture, Modular Systems, Tables and other furniture pieces are warranted for three (3) years from the date of purchase as shown on your sales receipt. The warranty period starts from the date of purchase. This warranty extends only to the original purchasers who acquire new product from BDI Authorized Resellers. Any product, part, or component must have been assembled, installed, used, and maintained according to BDI's published instructions in order to be eligible for warranty coverage. Any modification to the original product voids the warranty.

To view BDI's complete warranty information, visit www.bdiusa.com/warranty

PRODUCT REGISTRATION

Registering your new BDI product allows us to send you important product updates, service information and helpful hints related to your BDI products. Register today, and you will be entered to win free a BINK table from BDI: www.bdiusa.com/register



WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT TIP-OVER:

- Install tip-over restraint.
- Place heaviest items in lower compartments.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

USE OF TIP-OVER RESTRAINT MAY REDUCE—BUT NOT ELIMINATE—THE RISK OF TIP-OVER.



BDIUSA.COM

These distinctive product configurations are protected by US and international patents, trade dress, and/or copyright laws. Cosmo & BDI are trademarks of Becker Designed, Inc. All rights reserved. ©2020, BDI | V.08.03.2020

Made in China.