


assembly instructions

bdiusa.com

customerservice@bdiusa.com

Component List

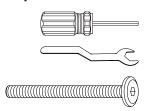

B1 - Hex Driver x 1

B2 - Hex Wrench x 1

C - 1/4-20 x 70 mm Screw x 2



D - 1/4-20 x 15 mm Screw x 16

E - Cabinet x 1

F - Metal Leg x 2

G - Wood Leg x 1

HL - Adjustable Shelf x 1

HR - Adjustable Shelf x 1

IL - Adjustable Shelf x 1

Sweep is engineered for easy assembly. Carefully follow this procedure to prevent any damage.


Placement and Maintenance

Sweep is designed for indoor use on level floors. Clean wood veneer with a moist cloth. Clean glass with glass cleaner.



Step 1 **Unpack and Identify**


Unpack and identify the components at left. Note that some components are shipped inside the cabinet. The assembly workspace should be a non-marring surface such as clean carpet. For missing hardware pieces, please contact BDI Customer Service at customerservice@bdiusa.com. For all other concerns, please contact your BDI Retailer.

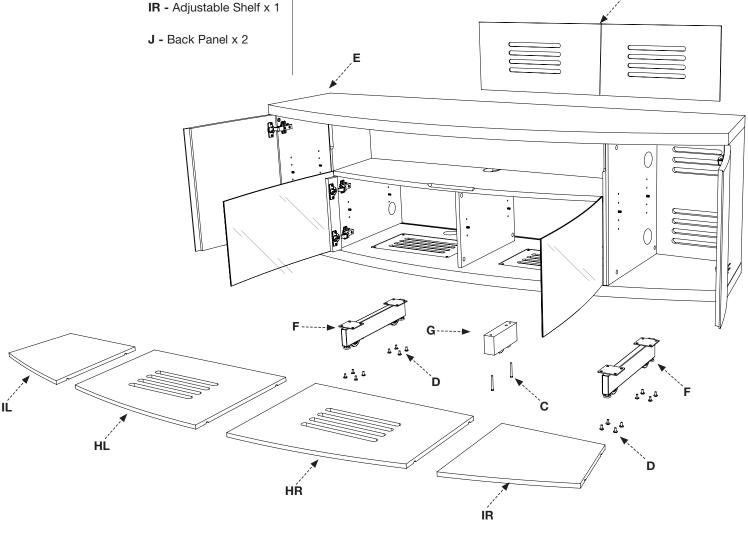

Step 2 Build Base Assembly

With the help of another person, position the cabinet on its back. Attach **Metal Legs (F)** to **Cabinet (E)** using **Screws (D)** and tighten with **Hex Driver (B1)**. Attach **Wood Leg (G)** to **Cabinet (E)** using **Screws (C)** and tighten with **Hex Driver (B1)**.



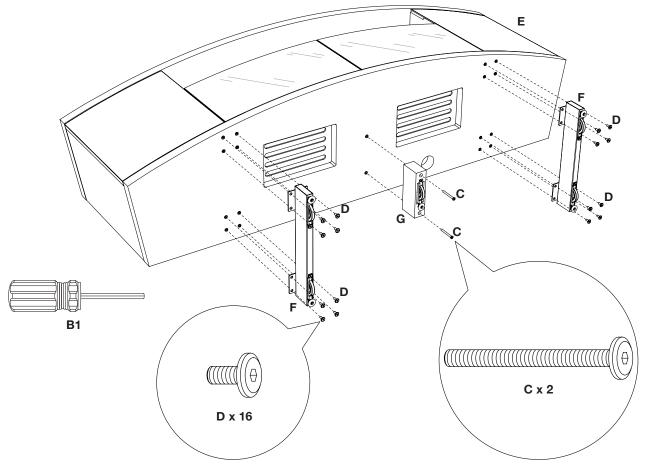




With the help of another person, position the cabinet right side up. Install **Back Panels** (J) to the backside of the cabinet by inserting top edge in upper channel then tipping bottom edge forward and into lower channel.




NOTE: Velcro straps are included for your convenience to facilitate wire management.

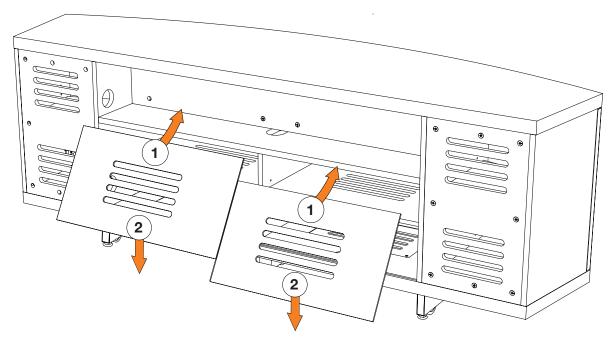



Step 4
Adjust Shelf Height
If desired, lift Adjustable Shelf (H, I) away, loosen & remove related Shelf
Support Pins, reinstall the Shelf Support Pins at desired height, then reinstall
Adjustable Shelf.

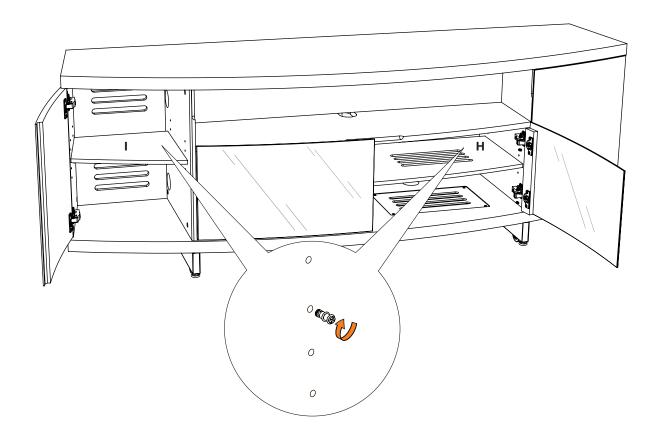


Fine tuning your new BDI Sweep Home Theater Furniture


These steps are to be followed after you have unpacked and completed the simple assembly instructions for your Sweep AV cabinet. Due to jostling in freight or perhaps an uneven floor, the doors on your Sweep cabinet may not appear to be in perfect alignment. Making a few minor adjustments can rectify this situation. Be aware that depending on your situation, patience and a bit of trial and error are required. The high-quality European hinge hardware is infinitely adjustable, but changing one element can cause the need for further adjustments. Through a little adjustment, you can modify the orientation of the cabinet doors to make sure that they are sitting perfectly on your Sweep unit.

STEP 1 - Level your Sweep unit

Levelers are integrated into each leg assembly and are accessed at the bottom of each cabinet leg using **Hex Wrench (B2)**. If your floor is uneven, you may extend one or more levelers to attain a level, stable cabinet placement. Turning the leveler clockwise will extend the leveler; turning it counter-clockwise will retract it.

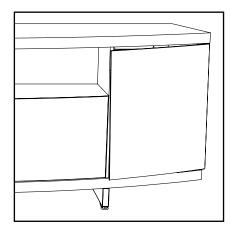

INCORRECT! Door is out of alignment with the rest of the unit.

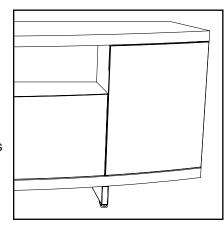


CORRECT! Door is sitting squarely and evenly spaced on tops and sides.

STEP 2 - Adjust Door Hinges (if needed)

The doors on your cabinet should be evenly spaced and the doors should open and close freely without rubbing against the door frame.

If the cabinet's doors appear out of alignment, this condition can be corrected with minor adjustment to the European hinges on each door.

Because these hinges are infinitely adjustable, adjusting one hinge element can sometimes cause the need for adjustments to other elements. But with a few adjustments, you can modify the orientation of the cabinet doors to make sure that they hang perfectly within your cabinet.

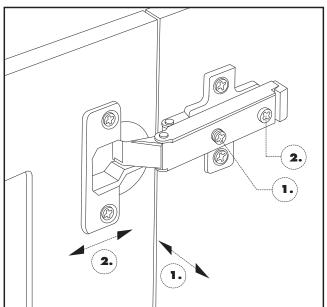

Use the **Phillips Screwdriver (A)** supplied to adjust Sweep's door hinges:

- By adjusting **Screw 1**, the door will move LEFT or RIGHT within the frame. Make minor adjustments at both top and bottom hinges for best results.
- By adjusting Screw 2 the entire door will move IN or OUT, opening or closing the gap between the door frame and cabinet. (This screw rarely needs adjustment.)